

GB

closer to nature® electric bottle warmer









Please read and retain this important information for future reference.

INSTRUCTIONS

The speed at which the warmer heats the milk or food will depend on the size of the bottle or container and the starting temperature of the milk or food (e.g. room temperature 20°C or from the refrigerator 5°C).

We recommend that setting 3 is always used for heating up, and settings 2 and 1 are used for keeping warm only. **MILK OR FOOD SHOULD NOT BE HEATED FOR OVER 30 MINUTES.**

The guide gives an indication of the time you can expect the warmer to take.

				
INITIAL TEMPERATURE OF FOOD	150ML (5OZ) TOMMEE TIPPEE® CLOSER TO NATURE® BOTTLE	260ML (9OZ) TOMMEE TIPPEE® CLOSER TO NATURE® BOTTLE	340ML (12OZ) TOMMEE TIPPEE® CLOSER TO NATURE® BOTTLE	FOOD JAR (4OZ/113G)
				
	SETTING 3	SETTING 3	SETTING 3	SETTING 3
FROM FRIDGE 5°C (40°F)	5 MINUTES	9 MINUTES	15 MINUTES	20 MINUTES
ROOM TEMPERATURE 20°C (70°F)	4 MINUTES	6 MINUTES	8 MINUTES	14 MINUTES

Maximum average stabilised temperature is approximately 85°C

FOR FEEDING BOTTLES

- Place filled bottle in warmer.
- Fill the warmer with water to approximately 10mm below the rim of the warmer. Never let the water overflow or rise above the neck of the bottle. For larger bottles, fill to 12mm below the rim of the warmer.
- Before plugging in, make sure the bottle warmer is switched to the "MIN" setting.
- Plug in unit. The amber light will turn on to indicate the warmer is switched on and is heating up.
- Turn dial to setting 3.
- Once the water is heated, the amber light will switch off to indicate that the thermostat will maintain the temperature of the water. It does not indicate that the milk is ready.
- Heat the milk to the desired temperature. Ensure that the heating guidelines are followed to ensure that the food is not heated for too long.
- Take care when removing the bottle, as it and the surrounding water will be hot.
- For your child's safety – Always check food temperature before feeding by testing on a sensitive part of your skin. Take care not to overheat the milk.
- In between feeding, the bottle can be placed back in the warmer to keep milk warm. The thermostat will maintain the temperature of the water. In doing this the indicator light will switch to amber to indicate the warmer is heating up.
- Turn back the dial to the lowest setting and unplug the unit after feeding.

FOR BABY JARS

- Remove the lid and place jar in warmer.
- Fill the warmer with water to approximately 10mm below the rim of the warmer.
- Before plugging in, make sure the bottle warmer is switched to the lowest setting.
- Plug in the unit. The amber light will turn on to indicate the warmer is switched on and is heating up.
- Turn dial to preferred setting.
- Once the water is heated, the amber light will switch off to indicate that the thermostat will maintain the temperature of the water. It does not indicate that the food is ready. To ensure that the food stays at the temperature you have selected, the thermostat will maintain the temperature of the water. In doing this the indicator light may switch to amber whilst you are heating the food.
- Heat food to the desired temperature. Ensure that the heating guidelines are followed to ensure that the food is not heated for too long.
- Take care when removing the jar, as the surrounding water will be hot.
- For your child's safety – Always check food temperature before feeding by testing on a sensitive part of your skin. Take care not to overheat the food.
- In between feeding, the jar can be placed back in the warmer to keep milk warm. The thermostat will maintain the temperature of the water. In doing this the indicator light will switch to amber to indicate the warmer is heating up.
- Turn back dial to the lowest setting and unplug the unit after feeding.

CLEANING YOUR BABY BOTTLE AND FOOD WARMER

Unplug and allow to cool before cleaning. Wipe with a damp cloth only. Do not clean with abrasive cleaners or allow to come into contact with solvents or harsh chemicals, damage could result.

DE-SCALING

De-scale your bottle warmer every 4 weeks to ensure it continues to work efficiently.

To de-scale your bottle warmer, use de-scaling sachets, following the manufacturers instructions on the pack carefully.

WARNING

- When in use, the warmer contains hot water.
- Always keep the warmer and its lead out of the reach of small children.
- Always use on a flat, heat-resistant surface.
- Before plugging in the warmer for the first time, ensure the voltage is compatible with your electricity supply by checking the label on the base of the unit.
- Always place bottle or food jar into the warmer before adding water.
- Ensure water has been added before switching the unit on.
- Always unplug from the mains when not in use.
- The appliance is for household use only. Do not use outdoors.
- Do not immerse in water.
- Children should be supervised to ensure that they do not play with this appliance.
- The bottle warmer has been fitted with a cord wind on the base of the unit, to allow you to adjust the length of the cord safely. We recommend you keep the cord as short as possible.
- If the supply cord is damaged, it must be replaced by the manufacturer or similarly qualified persons in order to avoid a hazard.
- When the feed has reached the desired temperature, remove immediately. If left in the warmer, the temperature of the feed will continue to increase.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

INFORMATION ON THE DISPOSAL FOR WASTE ELECTRICAL & ELECTRONIC EQUIPMENT (WEEE)

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

WARRANTY:

This product has 12 months warranty period after the date of purchase. If you have any questions please call 0500 97 98 99 or website www.tommeetippee.com

Nothing in this warranty shall be construed as removing or limiting a consumers rights in law.

